 


THE GEKKO

USER INSTRUCTIONS

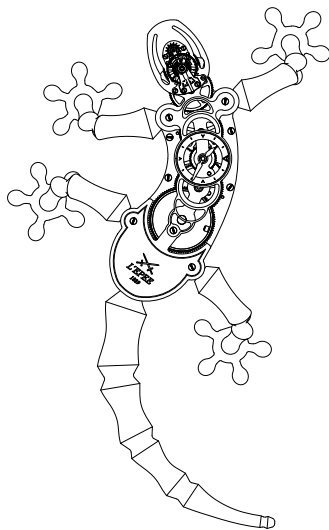

L'ÉPÉE

1839

CONGRATULATIONS

You have just acquired The Gekko, an advanced timepiece by L'Epée 1839.

The Gekko was designed and developed with passion and care by L'Epée 1839's master watchmakers in Delémont, Switzerland.

CONTENTS

Important information	4
Care and Maintenance	5
Winding the movement	6
Time setting	7
11 positions and rotating dial	8
Wall-mounting system	9



IMPORTANT INFORMATION

Please be very careful to never touch the red components pictured below.

The movement should never be in contact with any liquids - even in vaporized form. If it occurs, the clock should be serviced immediately.

A simple contact on certain pieces can generate delays in timekeeping, which can only be solved by servicing.

Fingerprints will also damage the coating.

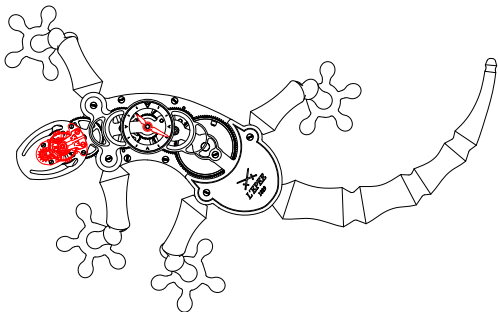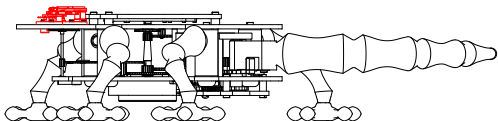

CARE AND MAINTENANCE

Use only a soft and dry cloth to clean the clock. Dust and particles contained in the cloth could scratch parts. Do not use any kind of cleaning products to wipe the clock . It is recommended to keep the clock distant from any source of heat or vibrations. To preserve the longevity and functionality of The Gekko, do not permanently expose the clock to direct sunlight or in a humid or dusty place.

Our clocks are developed to ensure optimal accuracy and reliability. It is well accepted for a fine mechanical clock to have a few seconds' variation per day and our clocks are set so as not to delay. However if you should notice a bigger variation, please contact an authorized dealer who will advise you, or a L'Épée 1839 technical support center which will proceed with the necessary adjustment.


As for all Horological pieces of art, it is recommended to periodically service your clock. A mechanical masterpiece requires fine oils for the lubrication of the movement. These oils deteriorate over the years. We therefore advise having the movement serviced every 3 to 5 years. Be aware that the optimal period between servicing times can vary depending on the surrounding environmental conditions.

WINDING THE MOVEMENT

Option 1 Shift the tail from side to side to wind the movement

Option 2 Using the dedicated key and turn it anti-clockwise.

The movement should be fully wound every 8 days. Be sure to wind up the spring completely. At the end of the winding procedure, you will feel the necessary force increase significantly; do not wind further as this is the sign that the movement is fully wound.

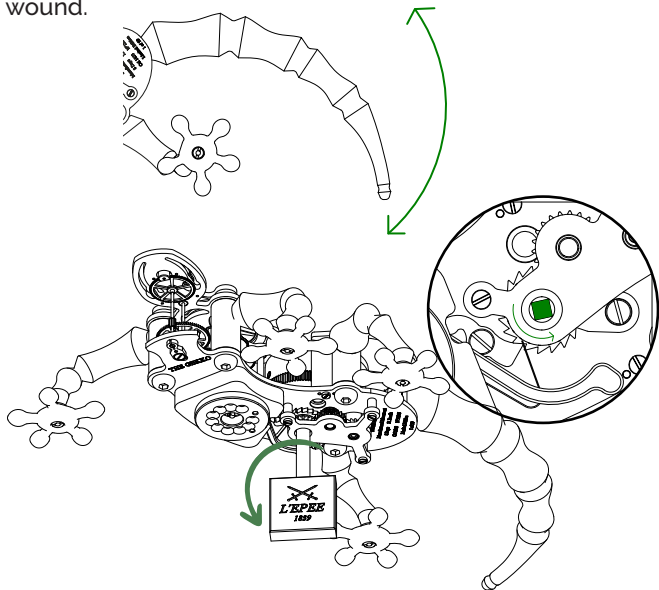


TIME SETTING

Set the time from underneath the clock using the key.

To adjust the time, insert the key and turn it anti-clockwise only.


Important: Do not turn the key clockwise. Setting the time in the wrong direction may damage the mechanism and require servicing.

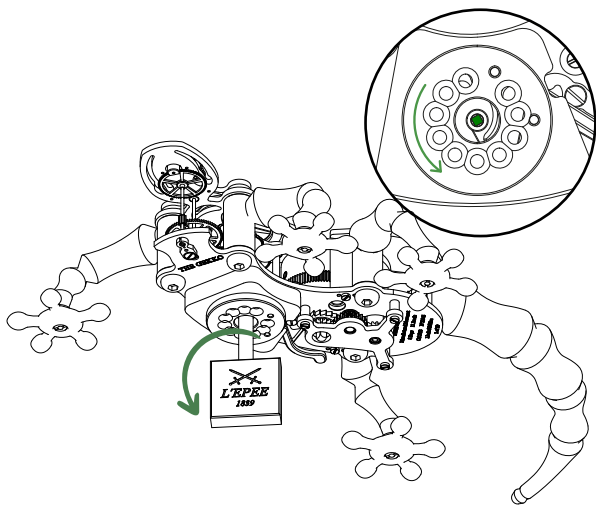

11 POSITIONS


The Gekko can be placed in 11 different positions:

- As a table clock
- As a wall clock, with 10 different display options

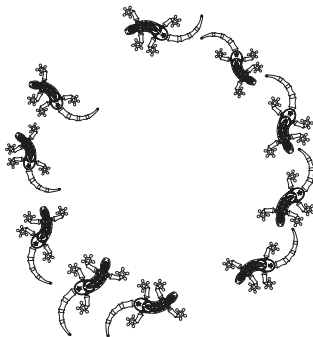


ROTATING DIAL

Depending on the Gekko's position, use a pointed tool, such as a toothpick, to adjust the dial so that the 12 o'clock index is positioned at the top.

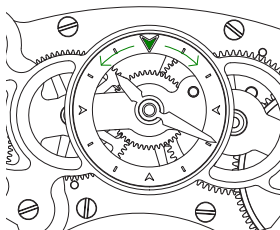

WALL MOUNTING SYSTEM

1. Screw the attachment to the wall using the appropriate screws
2. Push the trigger underneath the clock to release the fixing mechanism
3. Insert the small tip into one of the 10 holes, depending on the desired position
4. Release the trigger to lock the Gekko in place

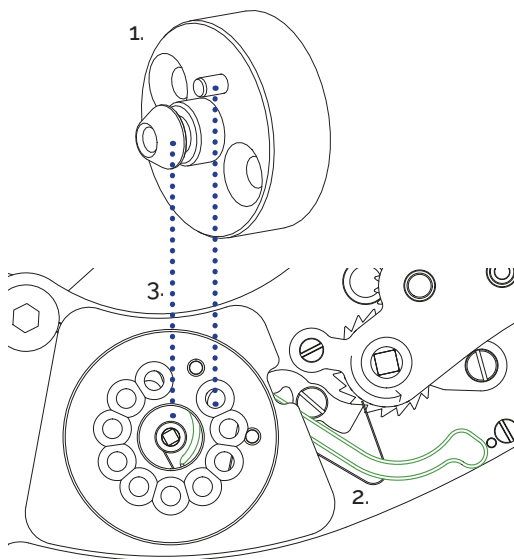

L'Epée 1839

Branch of LVMH Swiss Manufactures SA

Rue St-Maurice 1
PO BOX 340
2800 Delémont
Switzerland

Customer Service:

Tel. +41 (0)32 421 94 05
E-mail: sav@swiza.ch
www.lepee1839.com